

mp3 players

iPod			
iPod Mini	Shuffle	iPod Nano	iPod U2
Motorola ROKR mobile phone/MP3 player		Creative Technology Zen Micro	
PDAs		GPS	iPhone**
		addt'l adapter	
BlackBerry	Garmin iQue M5	Garmin USB Enabled	required* *

Cellphones: Brands & Model #

Nokia

N90	252	282	770	1100	1101	1221	1260	1261	1600	2100	2115i
2116i	2128i	2260	2270	2285	2300	2600	2650	2651	3100	3120	3155i
3200	3205	3210	3220	3230	3285	3300	3310	3330	3360	3361	3390
3395	3410	3510	3510i	3520	3560	3570	3585i	3585	3586i	3587i	3588i
3589i	3590	3595	3600	3620	3650	3660	5100	5110	5120	5125	5140i
5140	5160	5165	5170	5180	5185i	5190	5210	5510	6010	6015i	6016i
6019i	6020	6021	6030	6060	6061	6100	6101	6102	6102i	6110	6111
6120	6130	6150	6160	6161	6162	6165i	6165	6170	6185i	6185	6190
6200	6210	6220	6225	6230i	6230	6236i	6250i	6250	6255i	6260	6270
6280	6310i	6310	6340i	6340	6360	6370	6385i	6385	6510	6560	6585
6590i	6590	6600	6610i	6610	6620	6630	6682	6800	6820	6822	7110
7160	7190	7200	7210	7250	7250i	7260	7270	7280	7600	7610	7650
7700	7710	8210	8260	8265i	8265	8270	8290	8310	8390	8800	8801
8810	8850	8860	8890	8910	8910i	9110	9110i	9210	9290	9300	9500

Sony-Ericsson

A2218z	A2618s	A2628	F500i	J300a	K500i	K700i	P800	P900	P910a
							R380worl		
P910i	R300d	R300z	R300LX	R310	R320s	R380s	d	R520m	R600
S700i	S710	S710a	T20s	T28	T28s	T28w	T28z	T29	T29s
T39	T39m	T39s	T60c	T60d	T60LX	T61	T61c	T61d	T61LX
T61z	T62u	T65	T66	T68	T68i	T68m	T100	T105	T200
T206	T226	T230	T237	T290a	T290i	T300	T306	T310	T316
T600	T608	T610	T616	T630	T637	V800	Z200	Z290i	Z300a
Z500a	Z500i	Z600	Z1010						

Siemens

A52	A55	A56i	A56	A60	A65	C55	C56	C60	C62
C65	CF62	CF62T	CFX65	CT56	CX65	L55	M55	M56	M60
M65	MC60	R600	S55	S56	S65	SF65	SK65	SL55	SL56
SL65	SX1								

Samsung

SGH-A200	SGH-A300	SGH-A310	SGH-A400	SGH-A500	SGH-A530	SCH-A570
SGH-A580	SGH-A650	SGH-A800	SGH-A890	SPH-A900	SGH-C100	SGH-C207
SGH-C225	SGH-D100	SGH-D307	SGH-D357	SGH-D407	SGH-D410	SGH-D415
SGH-D500	SGH-E100	SGH-E105	SGH-E310	SGH-E315	SGH-E316	SGH-E317
SGH-E330	SGH-E335	SGH-E400	SGH-E600	SGH-E635	SGH-E700	SGH-E710
SGH-E715	SGH-E800	SGH-N200	N200C	SGH-N330	N330L	SCH-N330-MP
SGH-N400	SGH-N500	SGH-N600	SGH-N620	SGH-N625	SGH-P107	SGH-P207
SGH-P400	SGH-Q200	SGH-Q300	SGH-R200	SGH-R210	SGH-R225	SGH-R225M
SGH-S200	SGH-S300	SGH-S300M	SGH-S307	SGH-S500	SGH-T100	SGH-T209
SGH-T309	SGH-T319	SGH-T400	SGH-T609	SGH-V100	SGH-V200	SGH-V205
SGH-V206	SGH-X100	SGH-X105	SGH-X330	SGH-X426	SGH-X427	SGH-X427M
SGH-X450	SGH-X460	SGH-X475	SGH-X495	SGH-X497	SGH-X507	SGH-X600

ACE (MOBILE ESPN)

Motorola

270C	A630	A835	A840	A845	C331	C343	C353	E310	E398	E550	E815
i30	i30SX	i50SX	i60C	i80S	i85S	i90	i90C	i95	i95CL	Mpx200	Mpx220
P280	T280	T300	T300P	T720	T720i	T721	T721i	T730	T730C	T731	V60
V60C	V60G	V60i	V60S	V60T	V60P	V65P	V66	V66i	V70	V80	V120C
V120e	V120T	V120X	V200	V260	V265	V276	V300	V330	V400	V500	V505
V525	V550	V551	V557	V600	V620	V710	V810				

Motorola ROKR Cellular Phone/MP3 Mobile Device